

Link do produktu: <https://eros.abrakadabra.shop.pl/warming-double-ended-vibe-p-37608.html>

## Warming double ended vibe

Cena	<b>165,20 zł</b>
Dostępność	<b>Aktualnie niedostępny</b>
Czas wysyłki	<b>3 dni</b>
Numer katalogowy	<b>ERO-42-05917930000</b>
Kod producenta	<b>42-05917930000</b>
Kod EAN	<b>4024144602094</b>

### Opis produktu

A little all-rounder with special features! Can't you decide whether you want a vibrator or a massage wand? Well you don't have to because this pink toy is both – a 2-in-1 pleasure-giver that you can twist and turn as much as you want. If you hold the toy one way up, you have a vibrator with a ball-shaped handle but if you hold it the other way up, you have a massage wand with a wavy handle. The massage wand offers relaxing vibrations and its ball-shaped head makes spot-on stimulation possible. The head isn't flexible but its velvety soft surface means that it glides over your erogenous zones almost on its own. There is a decorative silver-coloured strip around the head. You can decide whether you want to enjoy gentle or more powerful stimulation because the massage wand has 10 different vibration modes to offer you. The button underneath the head adjusts the vibration modes. Furthermore, the wavy handle means that it is easy to hold and won't slip out of your hand. Or you can decide to use it as a vibrator – just turn the toy around and the massage wand's head will become the vibrator's handle. The velvety soft material and the curved shape with stimulating raised part on the shaft means that it feels wonderfully thrilling when you insert it. However, the vibrator can offer you much more than that because also has 10 vibration modes just like the massage wand. There is a motor in the shaft that can be controlled separately from the massage wand. The vibrator's vibration modes can be adjusted at the push of a button. And the best bit – the vibrator also has a warming function on the inner curved part that warms the vibrator up to a pleasant temperature. The warming function can, of course, be controlled separately from the vibration modes and can therefore be used without turning the vibrations on. It can be recharged with the included USB cable. Complete length 22.2 cm, insertion depth of vibrator 10 cm, vibrator Ø 2.6-3.4 cm, massage wand Ø 5.1 cm. Silicone with a polyurethane coating, ABS.